

**WARNING:**

CHOKING HAZARD - Small parts. Not intended for children under 3 years.

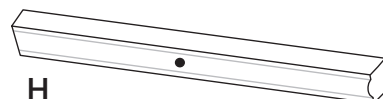
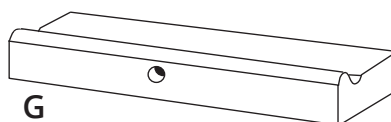
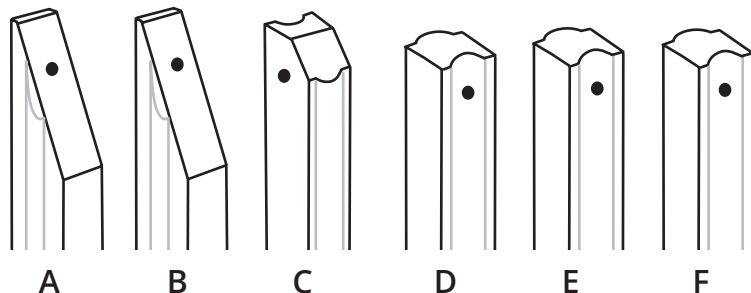
SUFFOCATION HAZARD - To avoid danger of suffocation, keep plastic bags away from babies and children. Do not use bags in cribs, carriages, or playpens.

Easel

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING

YOUR KIT CONTAINS:

- 8 Wood pieces (A through H)
- Hardware:
Five 2-1/2" Bolts with Washers and Wingnuts
3 Rubber tips for bottom of legs
3 Nails
1 Chain

**YOU WILL NEED:**

- Phillips screwdriver
- Small hammer

INSTRUCTIONS:

1. Position all 3 leg posts (A,B,C) at Top (See photo 1). Secure with 2-1/2" bolt, washer and wingnut.
2. Attach rubber tips to bottom of legs (D,E,F) by lightly tapping nails into center of legs and rubber tips (see photo 2). Rubber tips should be placed on the opposite end of legs with drilled holes.
3. Position the 2 front leg posts (D & E) onto leg posts (A & B) using bolts, washers and wingnuts as shown. Attach the back leg post (F), being sure to include one end of the chain to front of leg (D) with bolt, washer and wingnut (see photo 3).
4. Attach easel shelf (G) and pressure bar (H) as shown. Easel shelf (G) is the larger piece of wood with grooved top and recessed drill hole.
NOTE: Screw will only fit properly if it is inserted into the larger front hole of (G) first, then pressure bar (H), then washer, then chain, then wingnut.

Photo 1



Photo 2

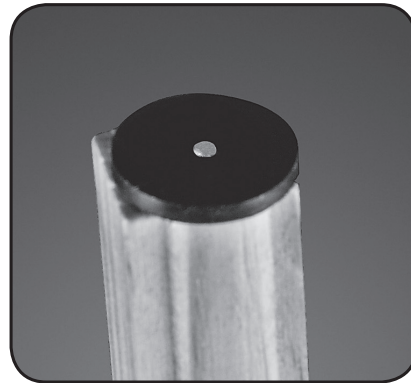


Photo 3



Photo 4



Call Toll-Free **1-800-243-9232** Online: **SSWW.COM**

Customer Service: **1-800-937-3482** E-mail: **cservice@ssww.com** FAX: **1-800-566-6678**