

Reorder Number

GP3176

1.2



Ping Pong Cannon (Pk/12)

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING

YOUR KIT CONTAINS:

- Wood Cannon Pieces
- Rubber Band
- Ping Pong Ball
- Wood Bead
- Paint
- Brushes
- Markers
- Glue

NOTE: The project is individually packed for your convenience!

YOU WILL NEED:

- Cups of Water
- Paper Towels

AGE GROUP: 8 and up
PROJECT TIME: 45 minutes



Call Toll-Free **1-800-243-9232**

Email: cservice@ssww.com FAX: 1-800-566-6678



© Copyright 2014 S&S® Worldwide Inc. All rights reserved. No part of this project may be copied or duplicated without the express written permission of S&S Worldwide.

Kit may contain silicone gel packets, which should be removed before use.

Reorder Number

GP3176

1.2



Ping Pong Cannon (Pk/12)

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING

YOUR KIT CONTAINS:


- Wood Cannon Pieces
- Rubber Band
- Ping Pong Ball
- Wood Bead
- Paint
- Brushes
- Markers
- Glue

NOTE: The project is individually packed for your convenience!

YOU WILL NEED:

- Cups of Water
- Paper Towels

AGE GROUP: 8 and up
PROJECT TIME: 45 minutes

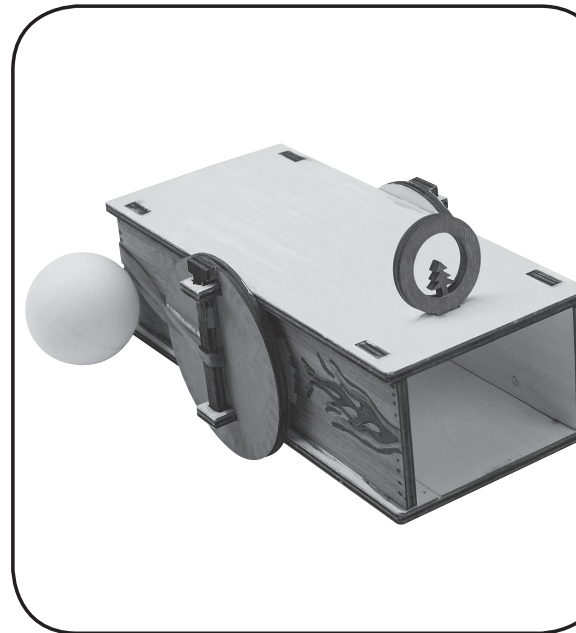

Call Toll-Free **1-800-243-9232**

Email: cservice@ssww.com FAX: 1-800-566-6678



© Copyright 2014 S&S® Worldwide Inc. All rights reserved. No part of this project may be copied or duplicated without the express written permission of S&S Worldwide.

Kit may contain silicone gel packets, which should be removed before use.

EACH PERSON SHOULD HAVE:

- 1 Bag with the Cannon pieces, Rubber band, Ping Pong Ball and Wood Bead
- 1 Brush

The paint, markers and glue will be shared among the group.

INSTRUCTIONS:

1. Paint 1 side of all the wooden pieces. Let dry.

TIP: Add a couple drops of water to your paint to make it flow easier on the wood.

2. Take the 4 large wood pieces. Slot fit the pieces together. The top part is the side that has the slot hole in the middle, towards 1 end. The "sight" piece with the tree fits into this hole. The flames on the sides should line up with the "sight" piece. Refer to the instruction photo. Once you get the pieces assembled, take apart and put a dab of glue in each of the slot holes. Then reassemble.
3. Take the 2 wood wheels and 1 at a time, carefully slide over the slots that stick out from either side. Remember to add a dab of glue to the slot holes.
4. Take the rubber band and 1 of the wooden pegs. Put the rubber band end against 1 wheel and slide the wood peg through the wheel slot and through the end of the rubber band and into the bottom slot. Remember to add a dab of glue to the slot holes.
5. Wrap the rubber band around the back side of the cannon (the side opposite the flames). As you are wrapping, thread the wood bead through the rubber band and position in the center of the cannon opening.
6. Repeat step 3 for attaching the wheel.
7. The cannon is now assembled!
8. Add details to your cannon with the markers. Let dry.

To Launch the Ping Pong Ball: Put the ball into the cannon and let it rest against the wood bead. Hold the bead and pull back the rubber band and let go to launch the ball! See how far it will go! Remember not to launch the ball at anyone.

Fun! Facts!

Unplug and Play

- Kids ages 8-18 spend an average of 7 hours and 38 minutes in a typical day using entertainment media, according to the Kaiser Family Foundation. That's more than 53 hours a week!
- In an average week, only 6 percent of children ages 9-13 play outside on their own, according to the Children & Nature Network.
- Think about some ways you can be "unplugged." Take a walk and explore, make nature "prints," play games or listen for birds!

EACH PERSON SHOULD HAVE:

- 1 Bag with the Cannon pieces, Rubber band, Ping Pong Ball and Wood Bead
- 1 Brush

The paint, markers and glue will be shared among the group.

INSTRUCTIONS:

1. Paint 1 side of all the wooden pieces. Let dry.

TIP: Add a couple drops of water to your paint to make it flow easier on the wood.

2. Take the 4 large wood pieces. Slot fit the pieces together. The top part is the side that has the slot hole in the middle, towards 1 end. The "sight" piece with the tree fits into this hole. The flames on the sides should line up with the "sight" piece. Refer to the instruction photo. Once you get the pieces assembled, take apart and put a dab of glue in each of the slot holes. Then reassemble.
3. Take the 2 wood wheels and 1 at a time, carefully slide over the slots that stick out from either side. Remember to add a dab of glue to the slot holes.
4. Take the rubber band and 1 of the wooden pegs. Put the rubber band end against 1 wheel and slide the wood peg through the wheel slot and through the end of the rubber band and into the bottom slot. Remember to add a dab of glue to the slot holes.
5. Wrap the rubber band around the back side of the cannon (the side opposite the flames). As you are wrapping, thread the wood bead through the rubber band and position in the center of the cannon opening.
6. Repeat step 3 for attaching the wheel.
7. The cannon is now assembled!
8. Add details to your cannon with the markers. Let dry.

To Launch the Ping Pong Ball: Put the ball into the cannon and let it rest against the wood bead. Hold the bead and pull back the rubber band and let go to launch the ball! See how far it will go! Remember not to launch the ball at anyone.

Fun! Facts!

Unplug and Play

- Kids ages 8-18 spend an average of 7 hours and 38 minutes in a typical day using entertainment media, according to the Kaiser Family Foundation. That's more than 53 hours a week!
- In an average week, only 6 percent of children ages 9-13 play outside on their own, according to the Children & Nature Network.
- Think about some ways you can be "unplugged." Take a walk and explore, make nature "prints," play games or listen for birds!