


W13007 Classic Equipment Cart Assembly Instructions


Contents:

- 2 – Wall Assemblies
- 2 – End Wall Panels
- 2 – U Shaped Tubes
- 1 – Hardware Bag
- 4 – Wheels

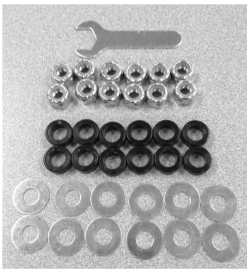



Hardware Bag Contents:

- 1 – Wrench
- 12 – Lock Nuts
- 12 – Plastic Washers
- 12 – Metal Flat Washers

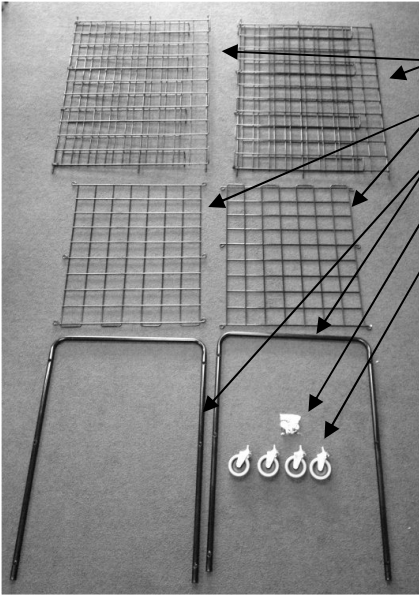


Assembly:

1. Open up the hinged Wall Assemblies and lay-out as shown in image #1. The assembly on the left will overlap the assembly on the right as shown in image #2.

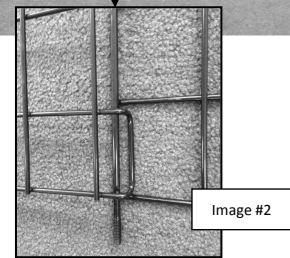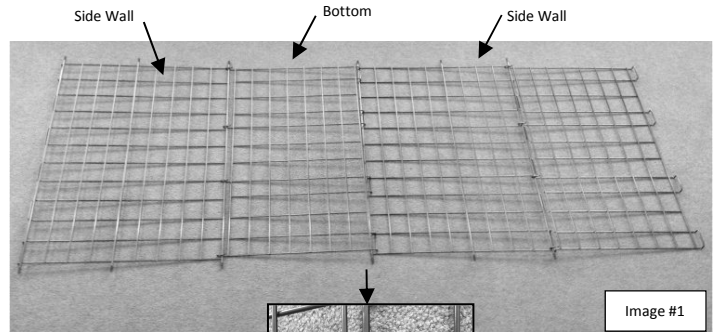


2. For this step an extra set of hands would be helpful, though it can be done with one person. Lift up the Side Walls to the right and left of the Bottom Panel until they are at 90 degree


angles with respect to the Bottom Panels. Make sure to keep the overlap between the two Wall Assemblies. First take one of the End Wall Panels and slide the 3 bent loops on either side of the panel over the 3 threaded post of each side wall. Then take one of the U Shaped Tubes with the open end of the U facing the ground, while lifting one end of the Wall Assemblies, position the 6 holes in the U Tube over the 6 threaded post of the Side Walls and slide the U Tube onto the threaded post. See Image #3.

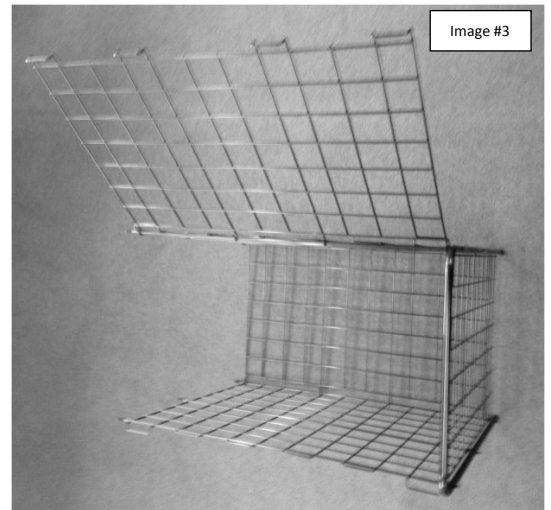

3. Secure the U Tube in position by placing a flat washer, a plastic washer and a lock nut over each threaded post as shown in image #4. Tighten the lock nuts with a wrench or pliers (not included) until the nut is flush with the end of the threaded post or until up to 1 thread is visible. Do not over tighten.

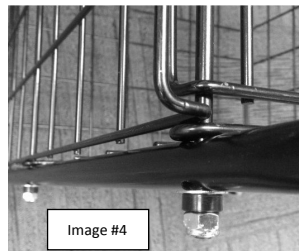

4. Repeat steps 2 and 3 for the opposite end of the cart.

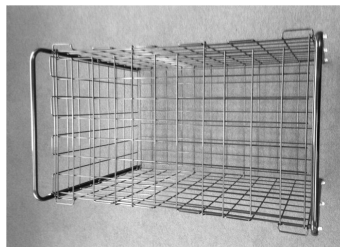

5. Slip the cart over and position the threaded end of one of the wheels over one of the threaded ends of the U tubes. Finger tighten a little, then use the included wrench to fully tighten. Repeat the same process with the other 3 wheels. Flip the cart over and you are done!

