

Instructions for: 1739JC TrueModern Grill Assembly

Hardware Package **HAIE**

Qty	Description
(4) XCQK	Aluminum Leg w/ Threaded Stud
(2) XBTU	Hexdrive Screw
(1) XAUS	4mm Hex Wrench





WARNING:
 CHOKING HAZARD/SHARP POINTS- Assembly hardware contains small parts and components with sharp points. Adult assembly required.

Tools Required:
 4mm Hex Wrench - Provided

Assembly Instructions:


1. Remove grill box and discard cardboard and foam packaging.
2. Remove shrink wrapped trays on top of unit and set aside.
3. Open doors and remove 4-**XBTU** Screws with supplied **XAUS** Hex Wrench. Retain screws for use later. Lift Top Grill Section off base and set on the floor upside down.

Hardware Illustrations

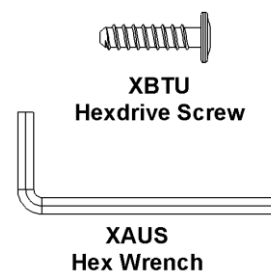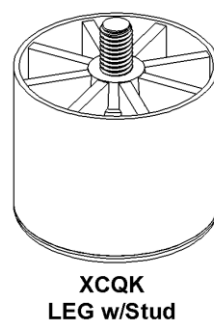


Not Actual Size


4. Remove 4-**XBTU** Screws attaching unfinished Shipping Brackets from Top Grill Section with supplied **XAUS** Hex Wrench. Retain screws for use later.

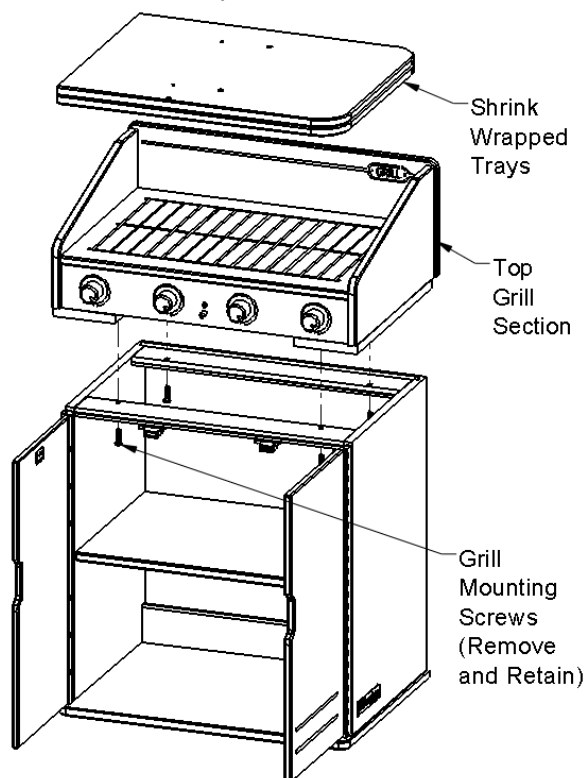


Mounting
Screws
(Remove
and Retain)

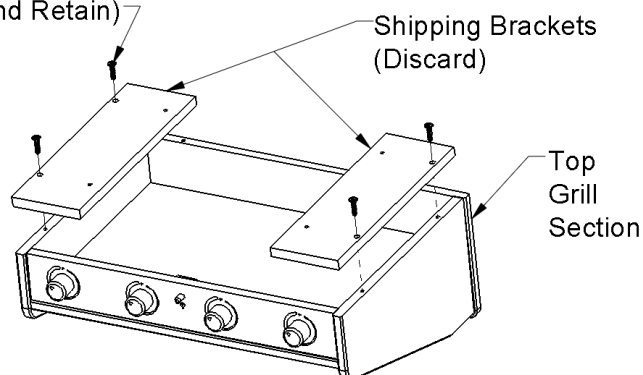

5. Install 2-Trays to Top Grill Section using 6-**XBTU** Mounting Screws. Ensure back dado groove is visible and opposite grill knobs.

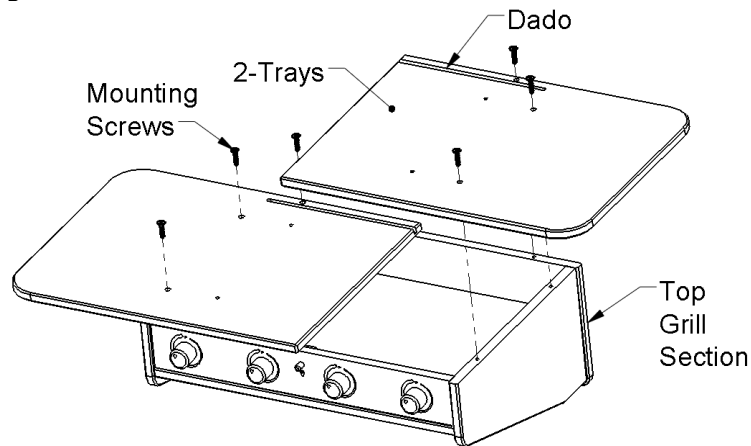

6. Place Top Grill Section with Trays installed on top of base. Align dado in trays with protruding back of base. Attach with 4-**XBTX** Mounting Screws.
7. Carefully tip unit over and lay on its back. Attach the legs to the unit; thread the 4-**XCQK** Leg into the metal threaded inserts installed in the bottom of the unit. Hand-tighten the legs.

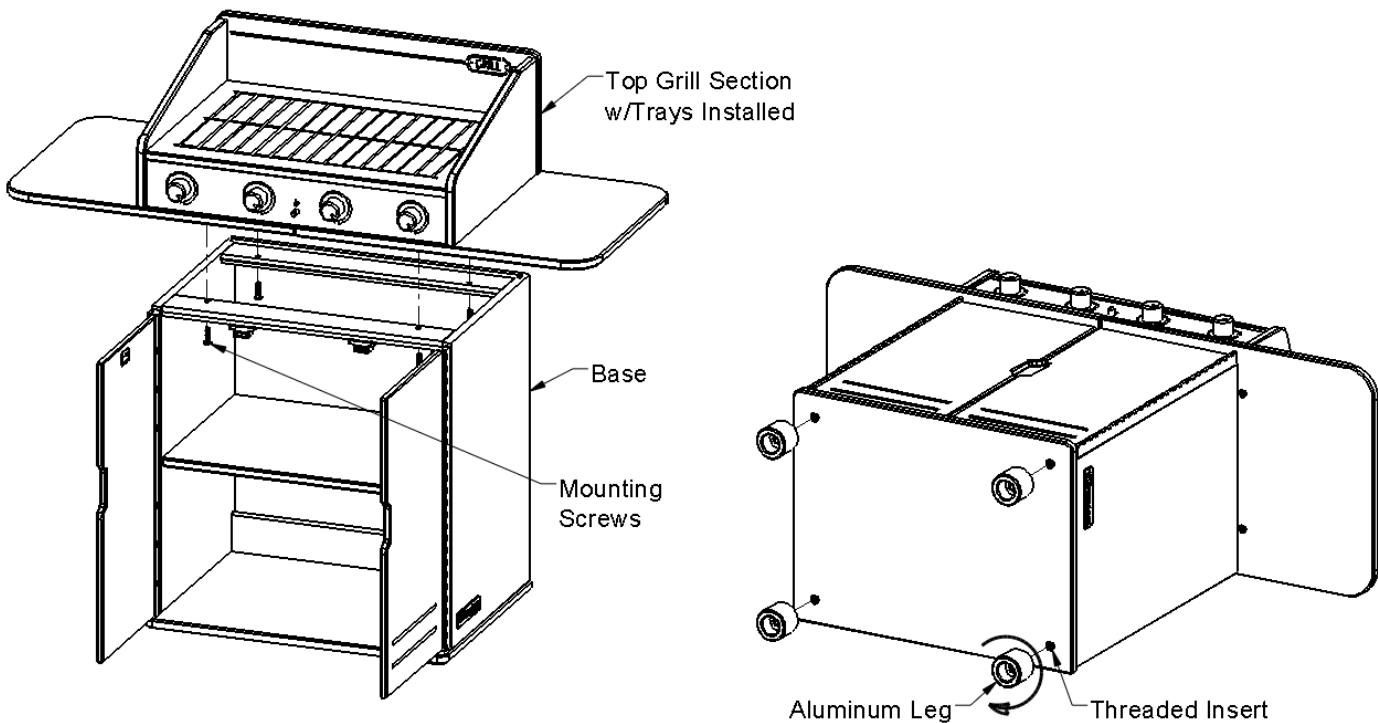

8. If you experience any difficulties when assembling this product, please contact the Jonti-Craft Customer Relations Team at (800) 543-4149 or sales@jonti-craft.com. All other requests for assistance must be directed to your Jonti-Craft Dealer.

General Care & Maintenance Guidelines: www.jonti-craft.com/generalcare

This product is covered by our Product Limited Warranty, available at www.jonti-craft.com/warranty