


#2530 Puppet Time Theater Assembly Instructions

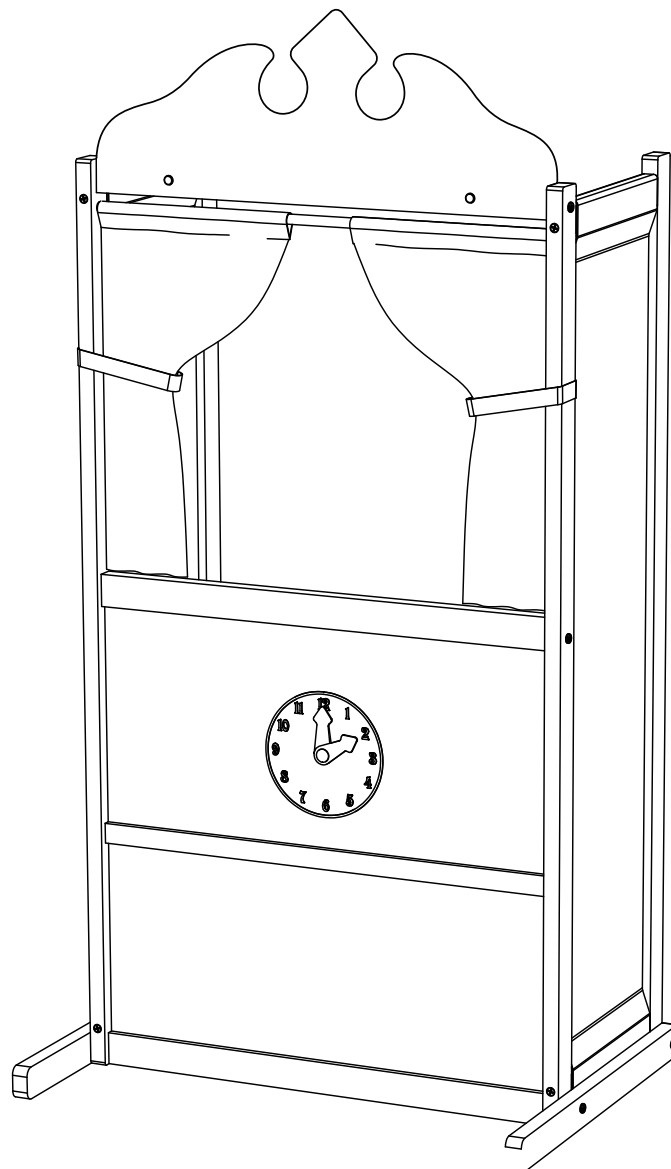

Adult Assembly Required.

WARNING: Keep away from fire.



WARNING:
CHOKING HAZARD - Small Parts.
Not for children under 3 years.

We care about your comments. Please call us!

Melissa & Doug

1-800-284-3948


www.MelissaAndDoug.com

Melissa & Doug products meet or exceed U.S. testing standards and pass our high quality requirements.


© Melissa & Doug, LLC, P.O. Box 590, Westport, CT 06881

PUPPET THEATER - PARTS LIST


RIGHT PANEL

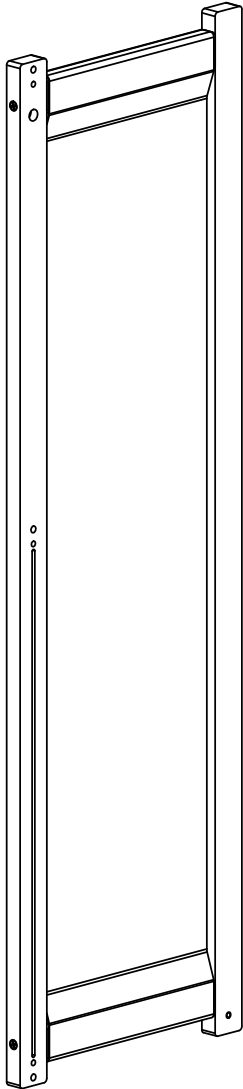


LEFT PANEL

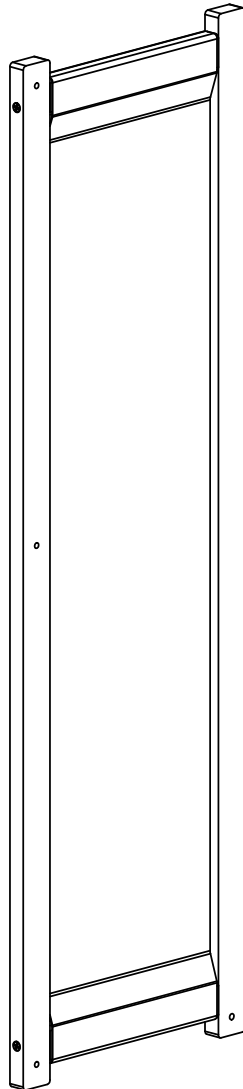


2 SLOTTED STRETCHERS

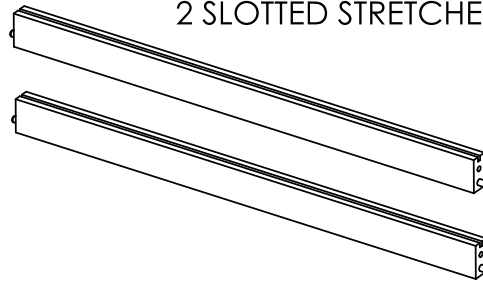


TOP STRETCHER
(NO SLOT)

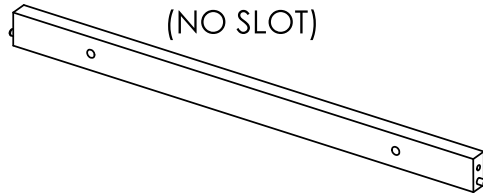


DIVIDER

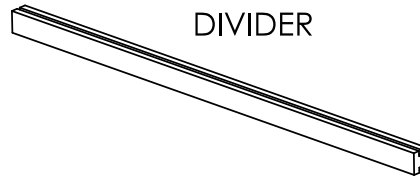


CURTAIN ROD

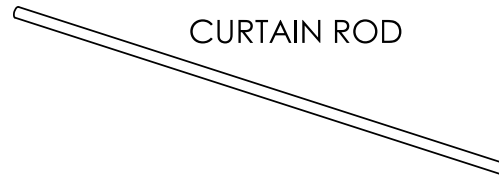


2 CURTAINS

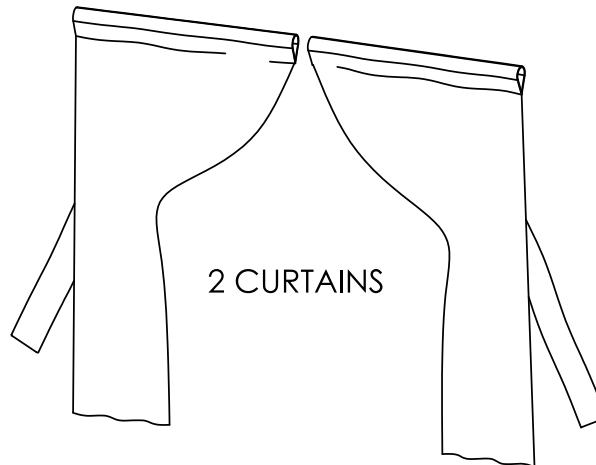


2 FEET

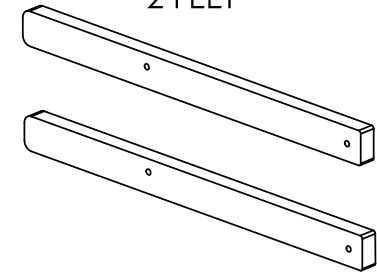


HEADER PANEL

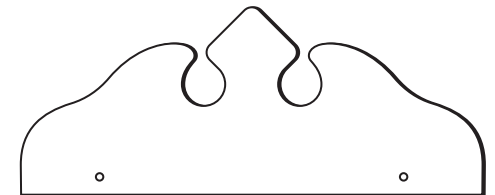

CLOCK PANEL

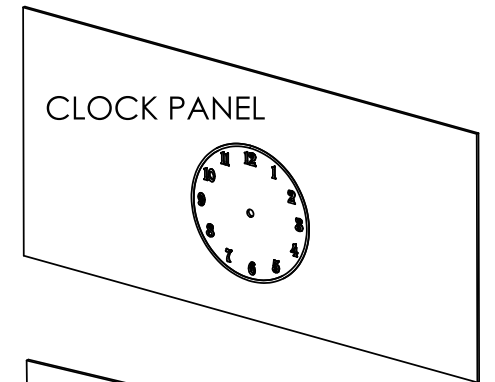


CHALKBOARD

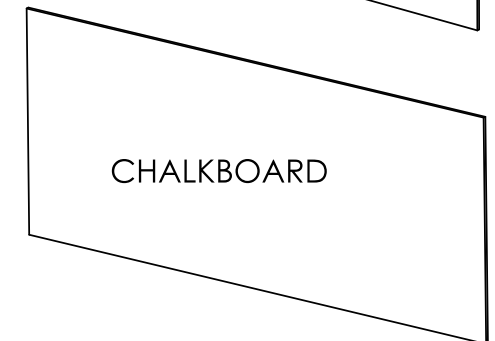


PUPPET THEATER - SUPPLIED HARDWARE


2 M6 LONG BOLTS

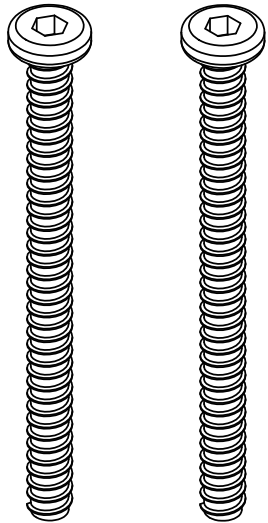


4 M6 MEDIUM BOLTS

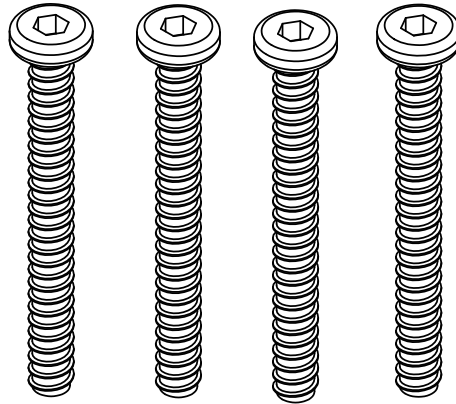


6 BARREL NUTS

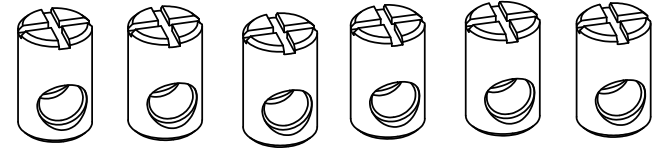

2 M6 SHORT BOLTS

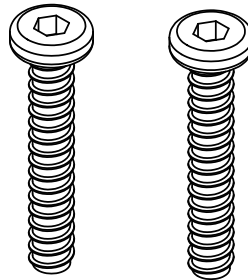

2 BINDER NUT/BOLT SETS
BRASS

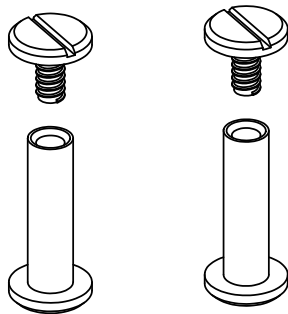


MALE SNAP GROMMET

FEMALE SNAP GROMMET



FOAM WASHER

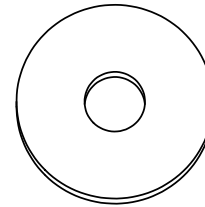


HEX KEY




HOURL HAND


MINUTE HAND

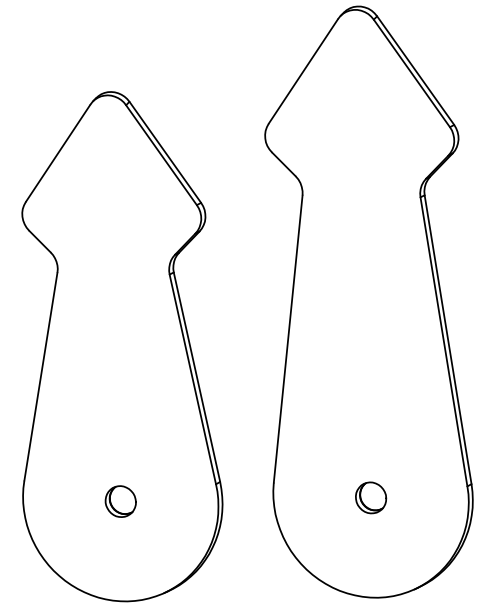


1. Assemble clock by fitting male snap grommet through hour hand, minute hand, clock panel, foam washer, and snapping into female snap grommet.

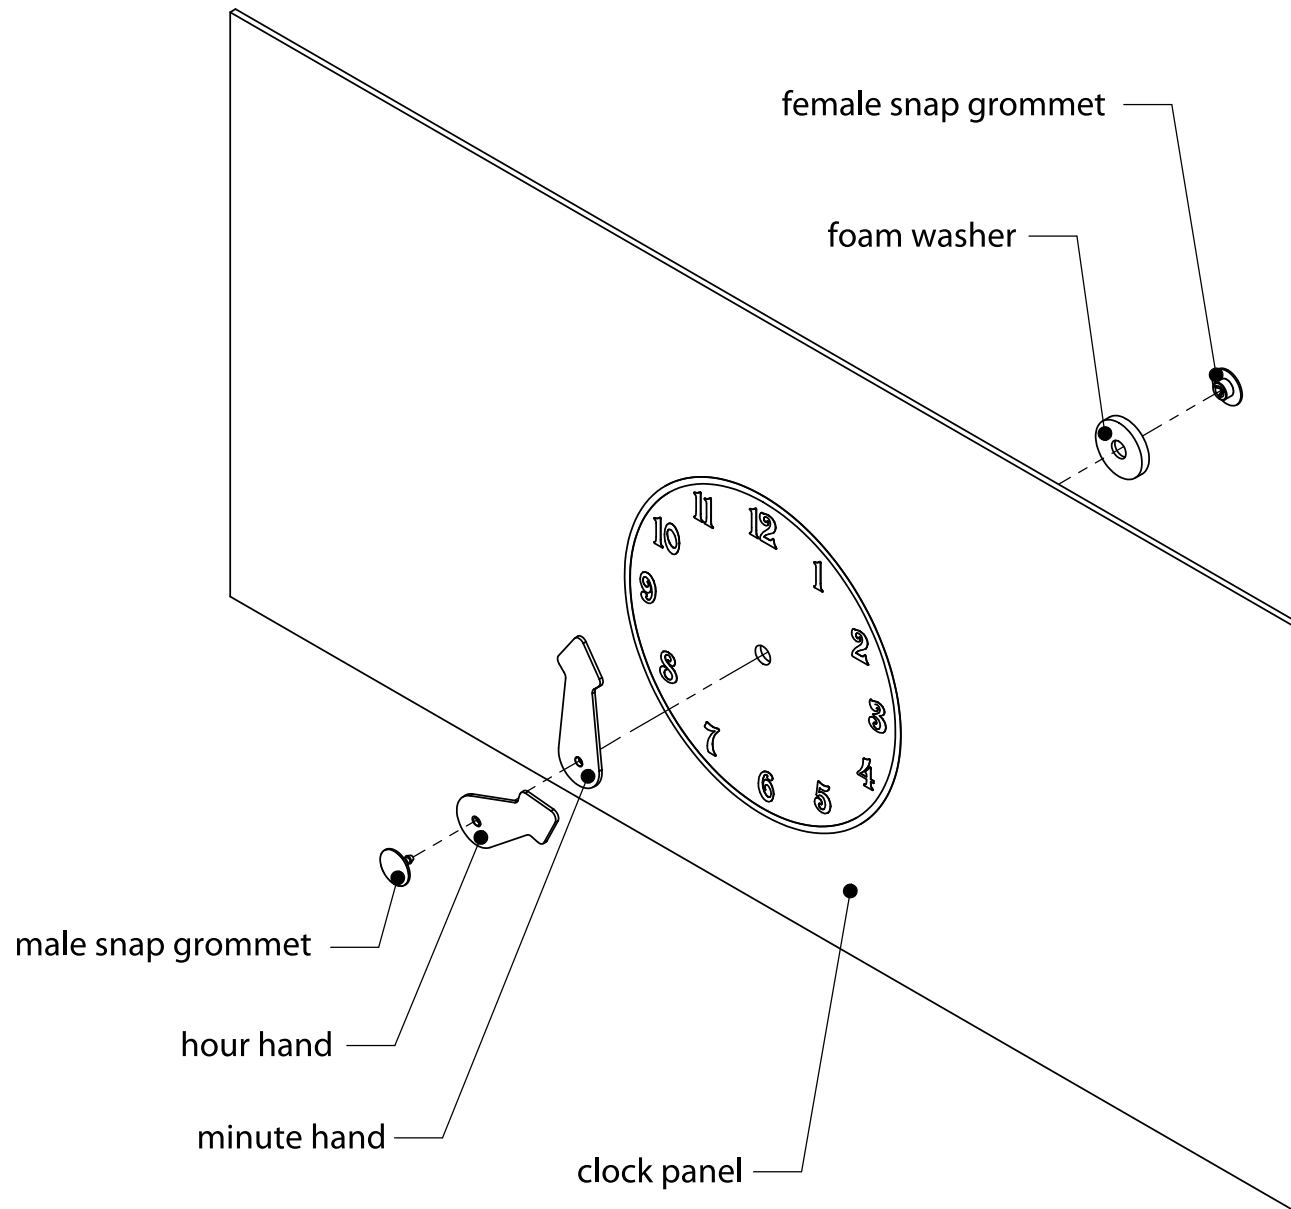


2. Attach one foot to the outside of the left panel by screwing short bolt into the threaded insert in the upright. Do not tighten- leave slightly loose. Attach the other foot to the outside of the right panel the same way.

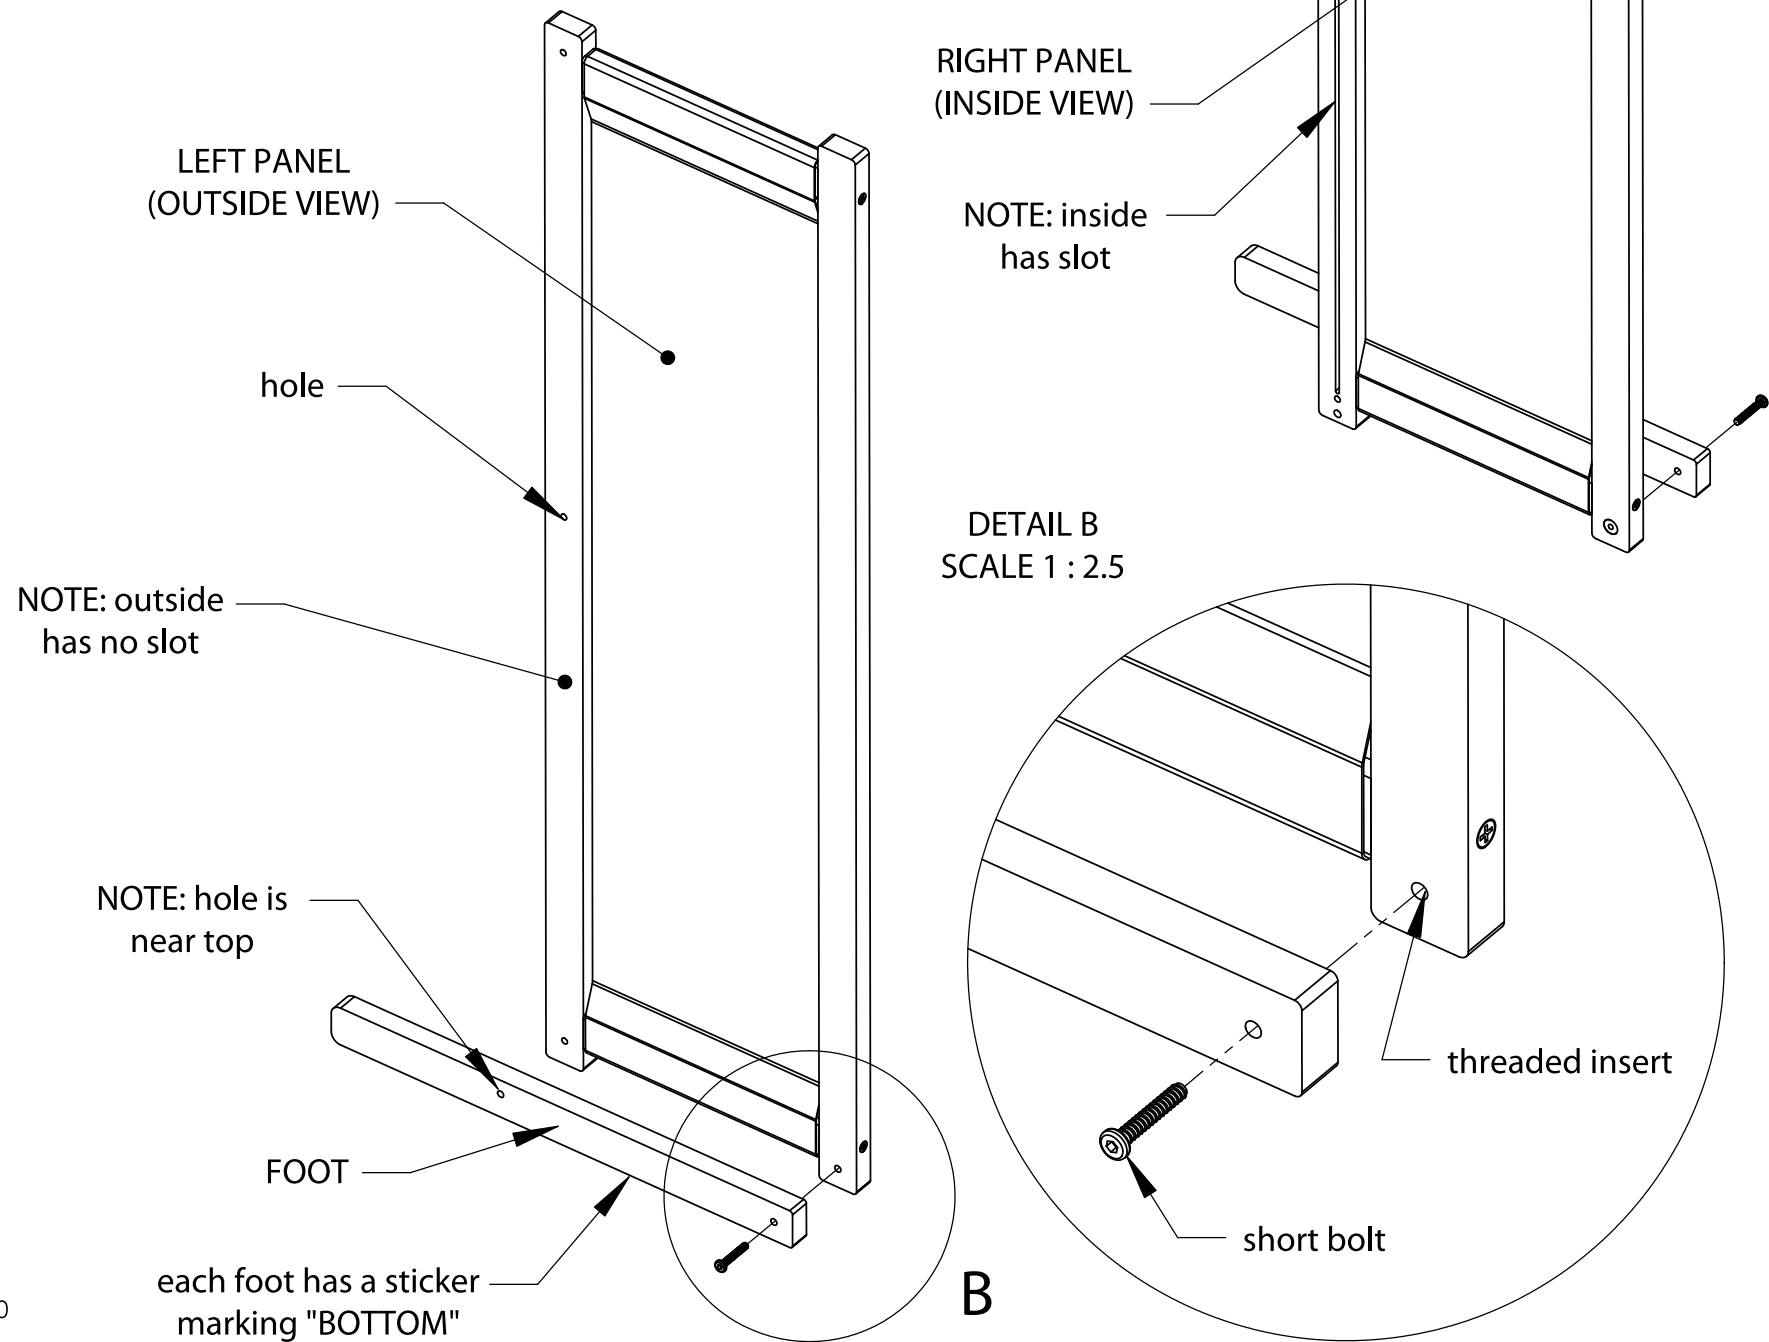


3. Connect one of the slotted stretchers to left and right side panel using 2- M6 long bolts and 2- barrel nuts. Leave bolts loose- do not tighten all the way.

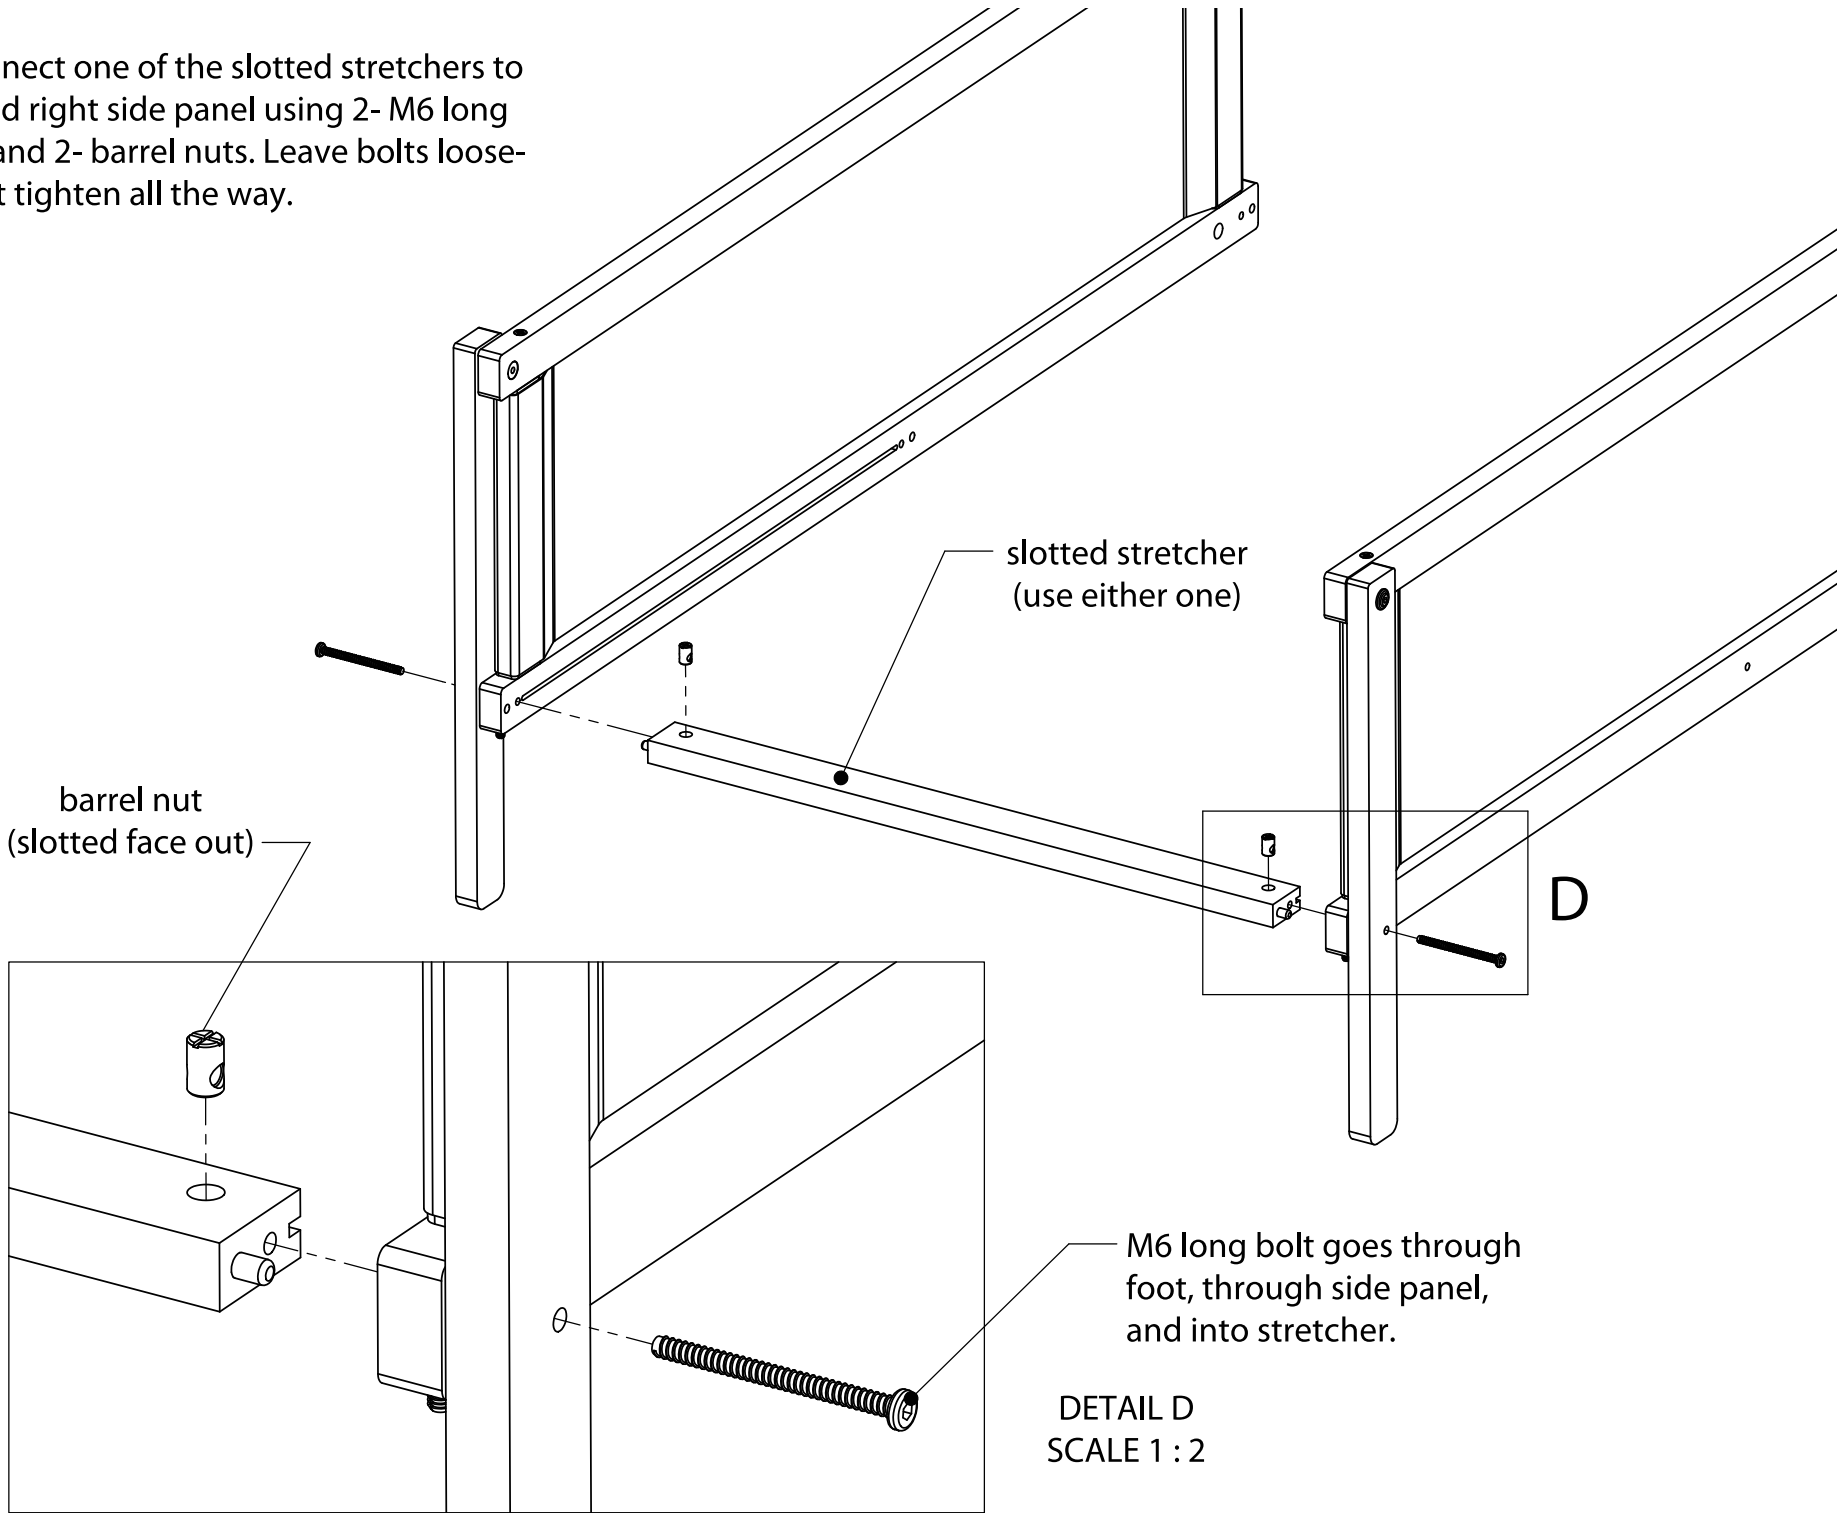


4. Fit the chalkboard into the slotted stretcher at the bottom. Fit the divider on top of the chalkboard, then fit the clock panel into the divider and place the other slotted stretcher on top. Attach stretcher to side panels with 2- M6 medium bolts and barrel nuts. Do not tighten bolts all the way.

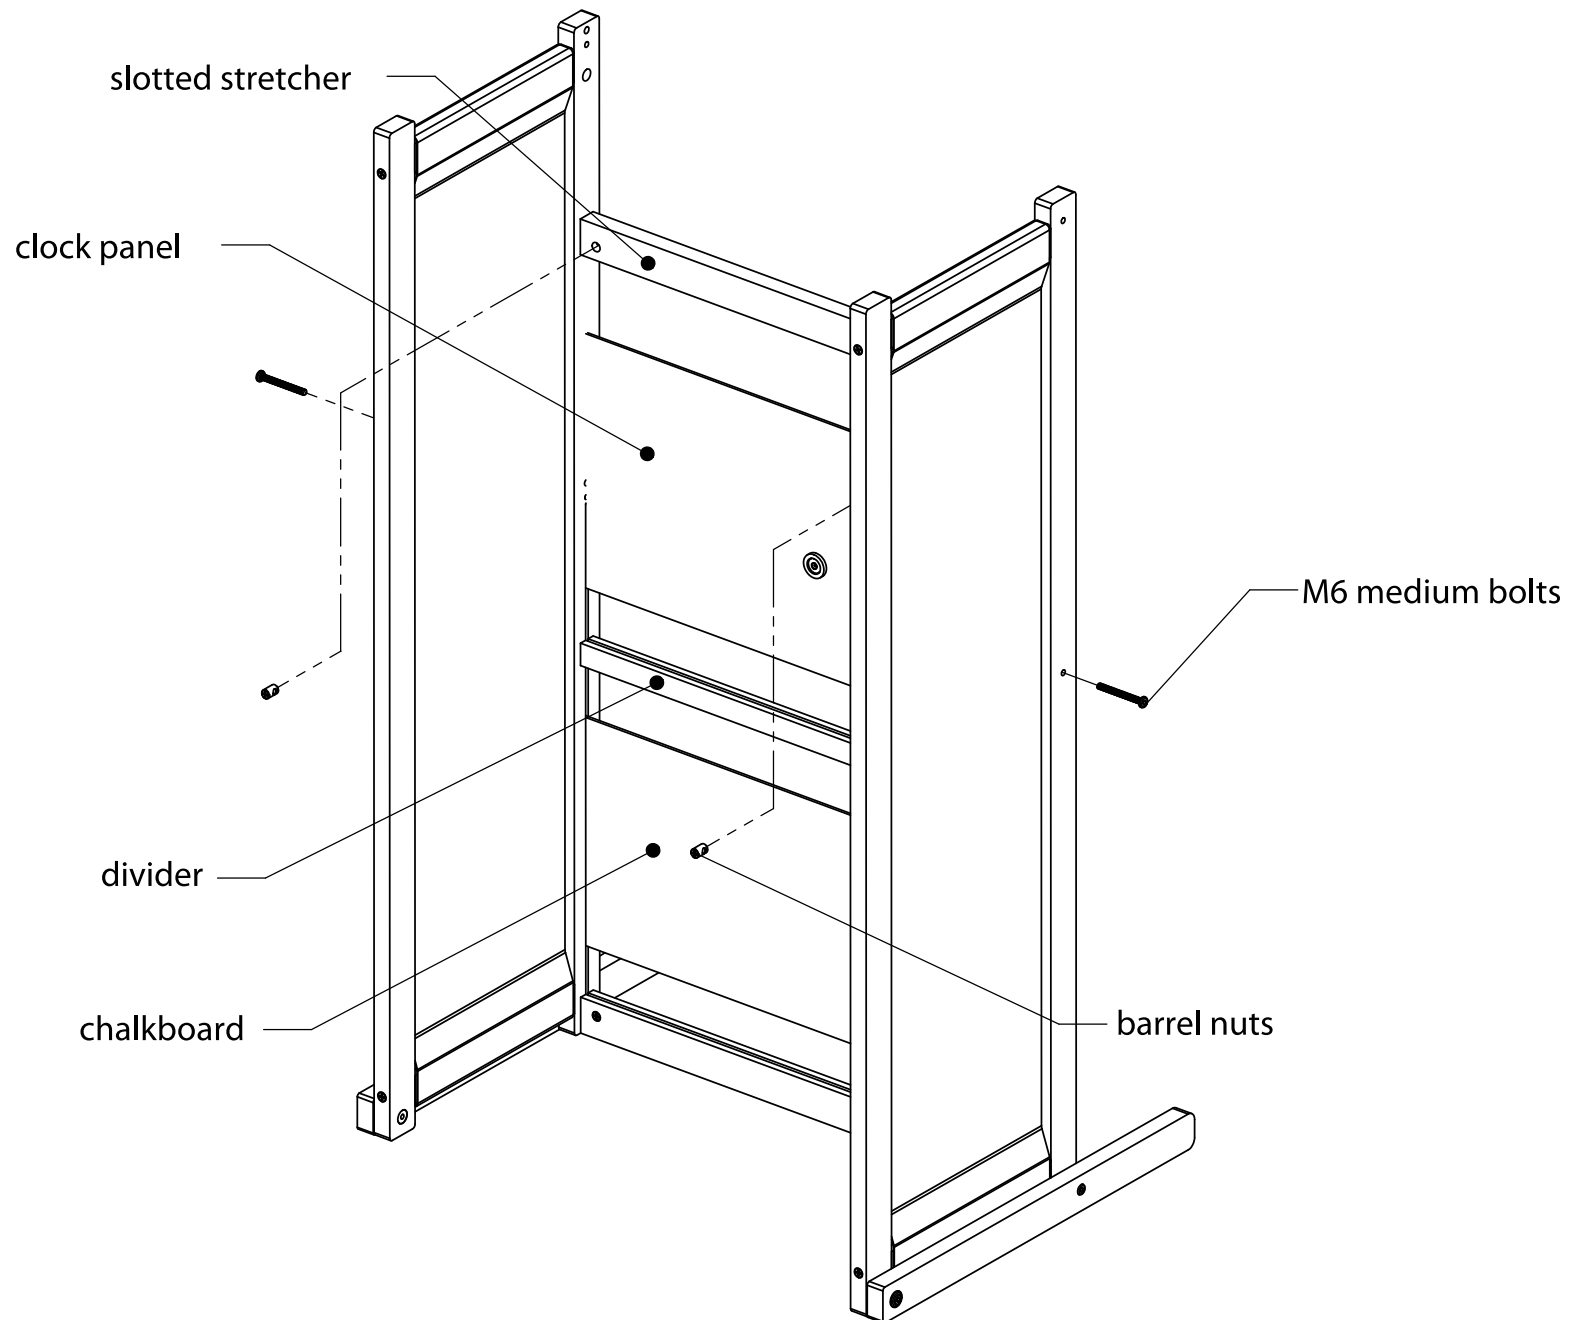


5. Slide curtains on to curtain rod with straps on outside edge

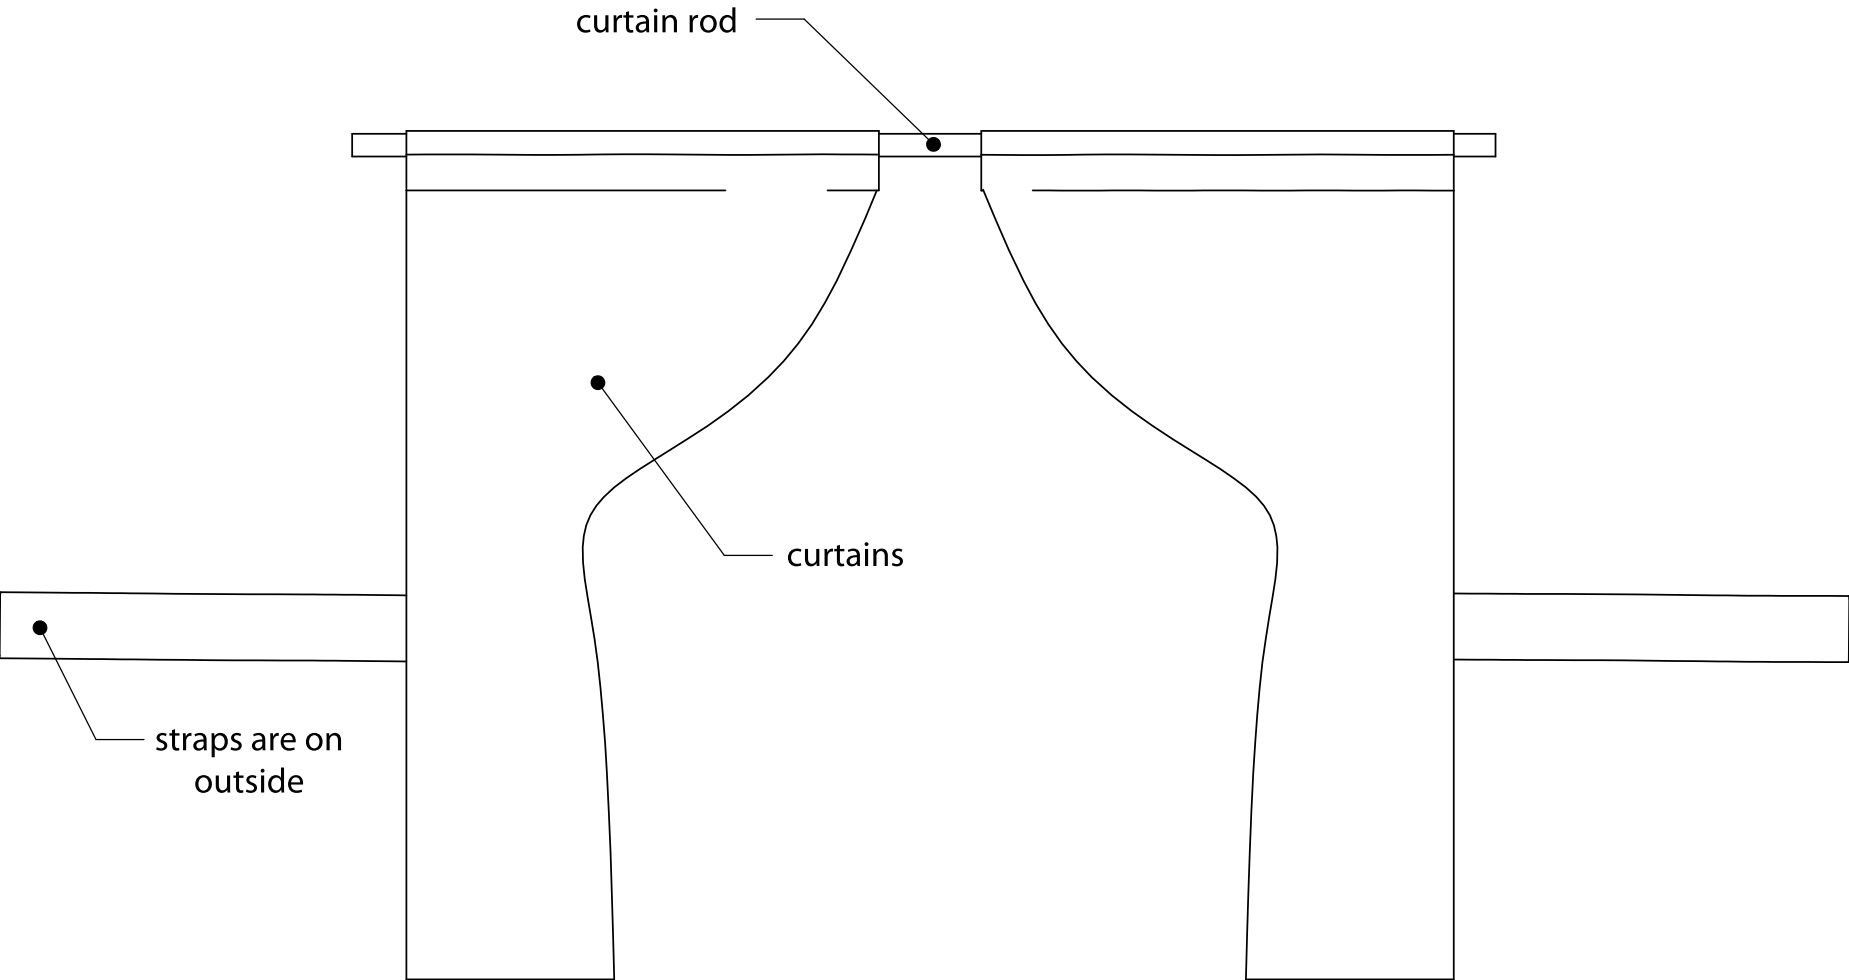

6. Attach top stretcher (no slot) to side panels with 2- M6 medium bolts and 2- barrel nuts. Leave bolts loose so you can insert curtain rod with curtains. After curtain rod is in position tighten up all the bolts.

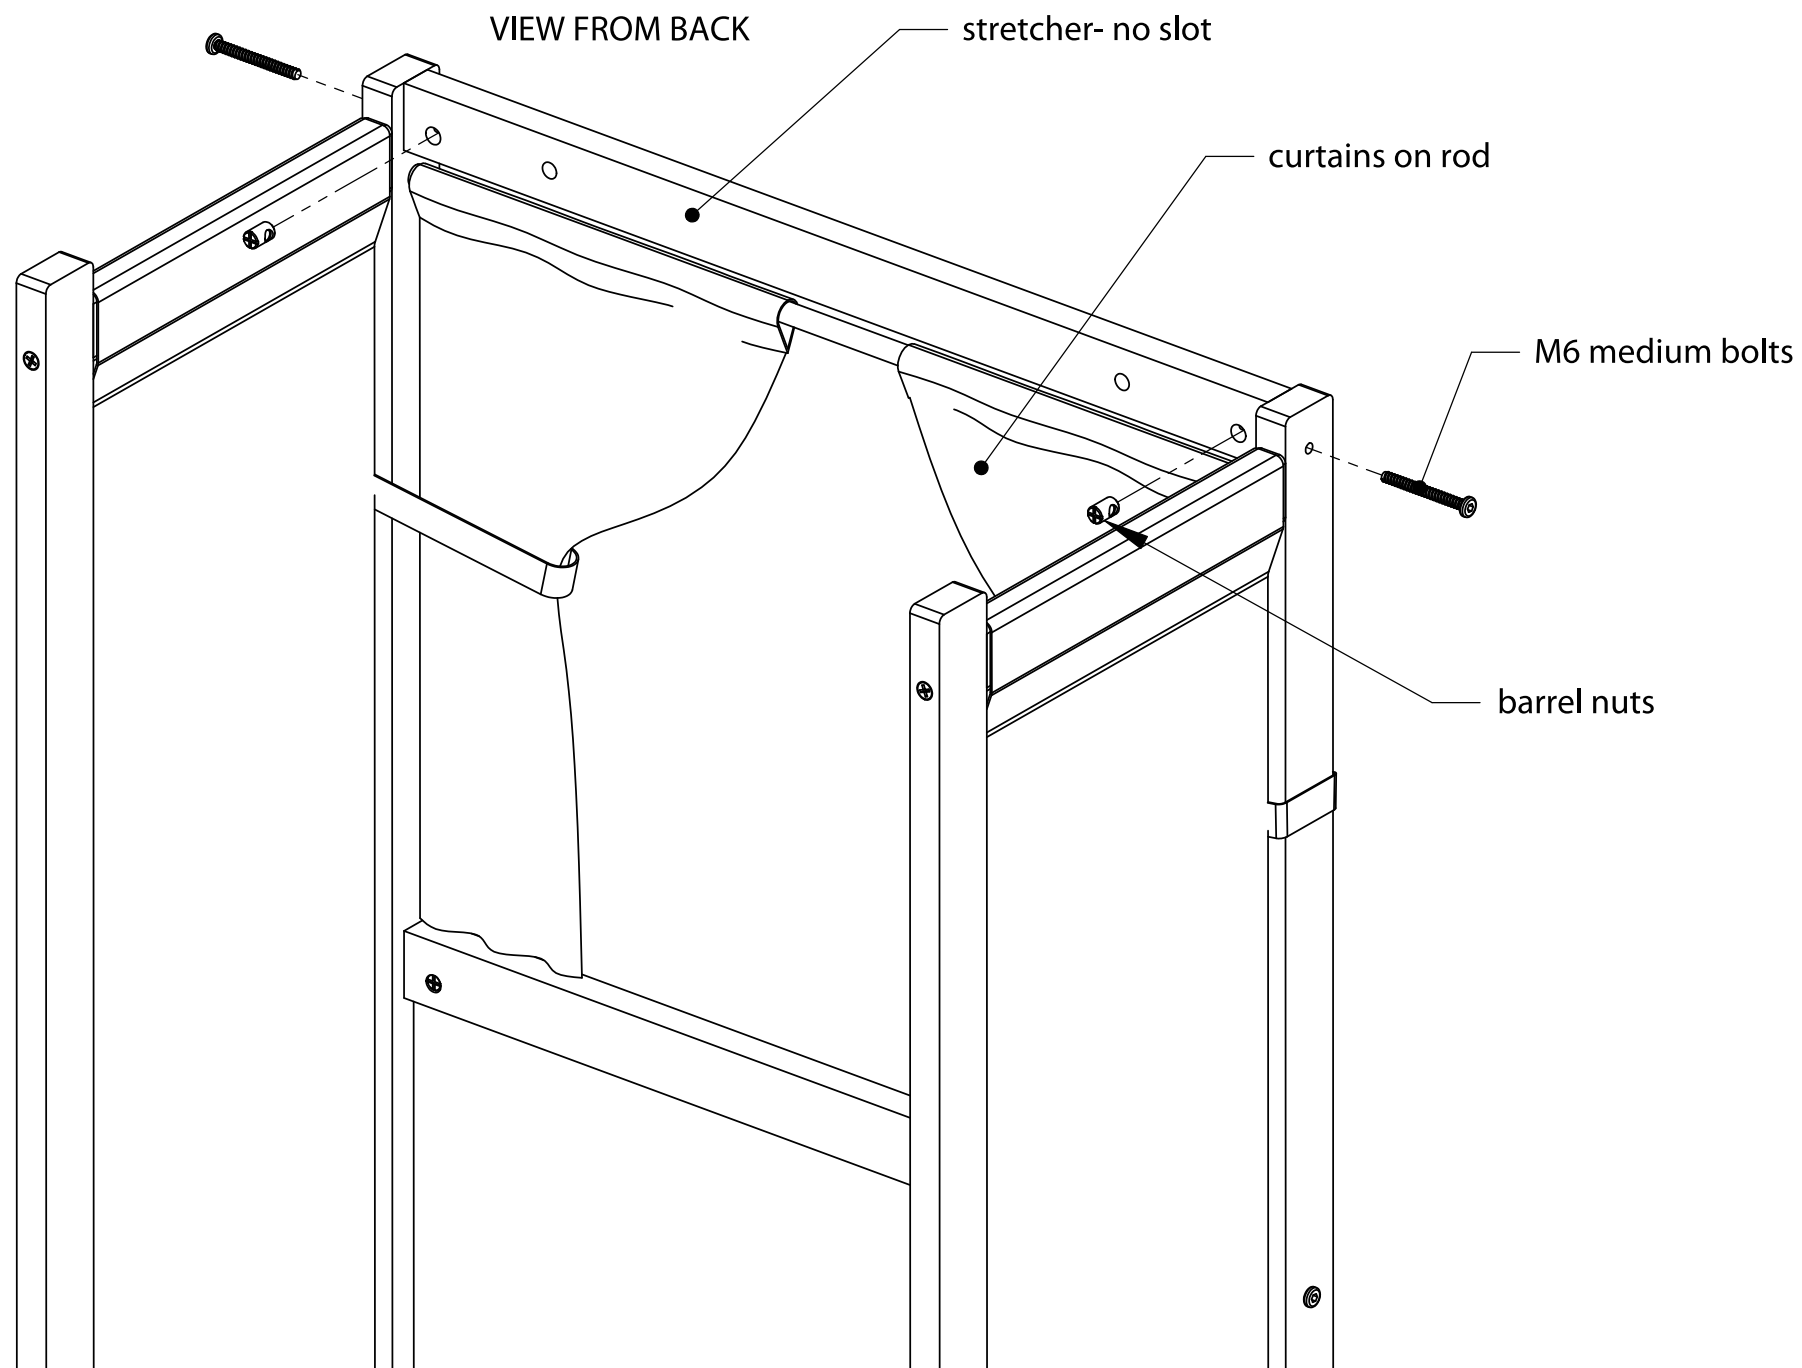

7. Attach front of header to the front of the top stretcher using 2- brass binder nut/bolt sets.

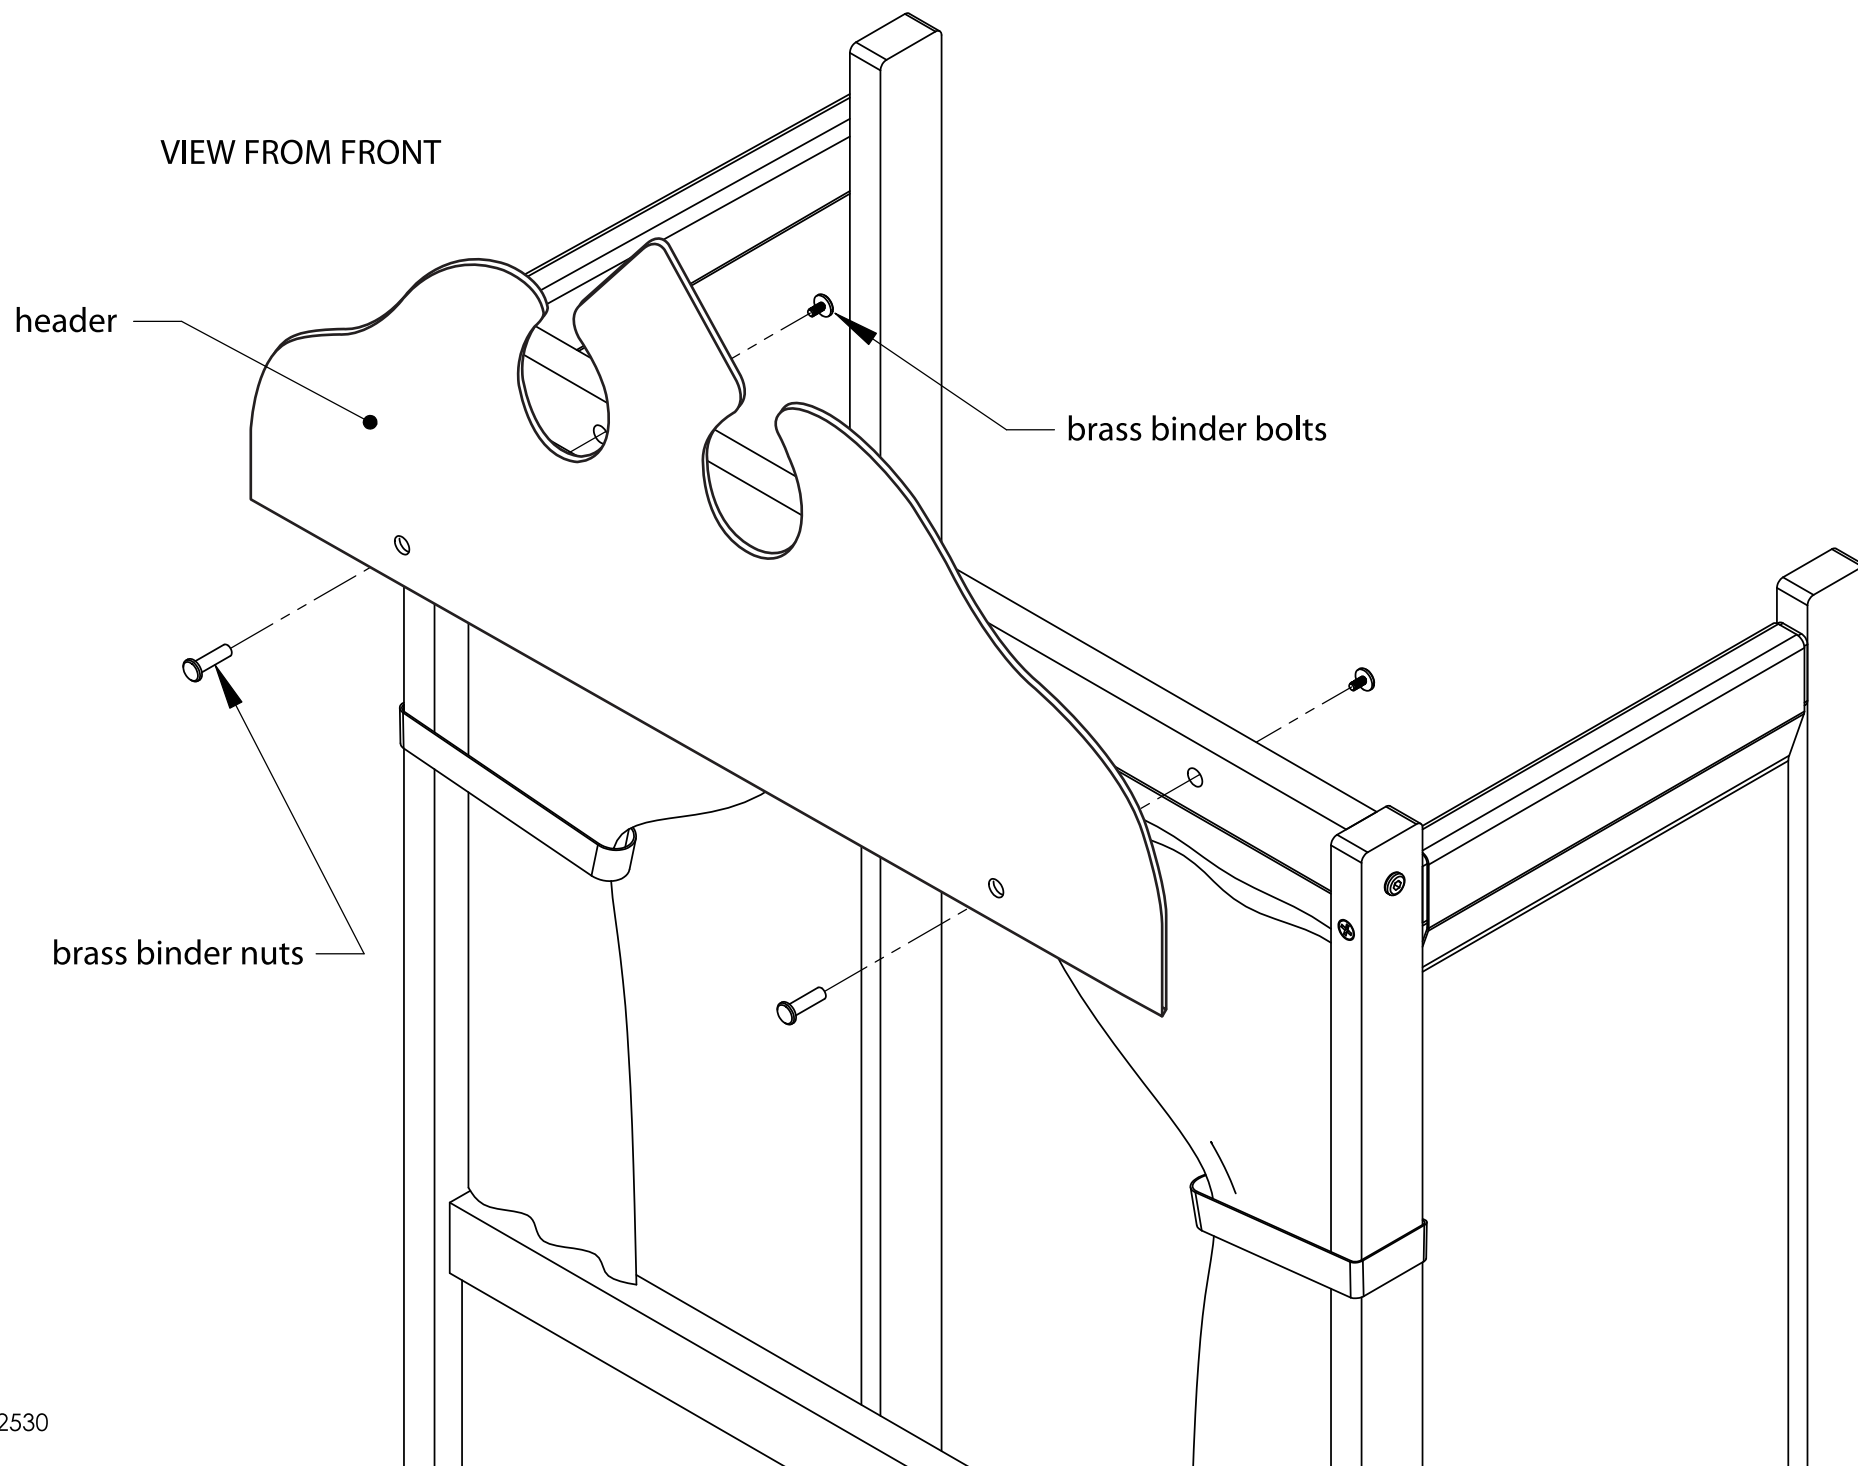

8. Chalkboard preparation:

The chalkboard may need to be "seasoned" before use. You will need to hold a piece of chalk horizontally and rub the entire surface of the chalkboard, covering it completely. Take a dry paper towel and, using an overlapping circular motion, rub the entire chalkboard surface. Finally, wipe the chalkboard surface with a chalkboard eraser.

Your chalkboard is now seasoned and ready for use.

for optimal performance,
season the chalkboard
before first use

